


How to operate Fire Alarm Control Panel BS-200

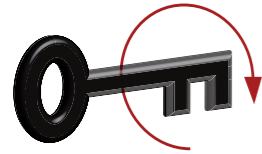

To operate the panel, turn the key clockwise.



Fire Alarm

One or several fire detectors or manual call points in one or several detection zones are signalling a Fire Alarm.

STEP	Actions to be taken
1	Follow all precautions described in the local fire instructions, step by step
2	To silence the internal buzzer, press the black Mute Panel button
3	Scroll with the arrow down (/up) button to observe the point(s) in fire alarm state.
4	To view detailed information for a selected point, press Enter
5	Investigate the scene(s) and carry out the necessary actions
6	To silence all alarms, press the red Silence button
7	Press the green Reset button



Fire Alarm with Alarm Delay

A point is sending an alarm signal from a Delayed Action detection zone (alarm delay is active).

STEP	Actions to be taken
1	Follow all precautions described in the local fire instructions, step by step
2	To silence the internal buzzer, press the black Mute Panel button
3	Scroll with the arrow down (/up) button to observe the point(s) in fire alarm state
4	To view detailed information for a selected point, press Enter
5	Investigate the scene(s) and carry out the necessary actions
6	To prolong the alarm delay, if necessary, press the black Prolong Delay button
7	If there is not a fire, the procedure can be ended by pressing the green Reset button If there really is a fire, press the Activate Outputs button or activate the nearest manual call-point to activate alarm, carry out the necessary measures, then go to step 8
8	To silence all alarms, press the red Silence button
9	Press the green Reset button

Pre Alarm

A fire detector in one of the detection zones has entered the Pre Alarm state.

STEP	Actions to be taken
1	Follow all precautions described in the local fire instructions, step by step
2	To silence the internal buzzer, press the black Mute Panel button
3	Scroll with the arrow down (/up) button to observe the point(s) in pre alarm state
4	To view detailed information for a selected point, press Enter
5	Investigate the scene(s) and carry out the necessary actions
6	To acknowledge a Pre Alarm, press the red Silence button
7	Press the green Reset button

Faults

Yellow fault indicator: Pulsing light when unaccepted fault warnings exist. The text display indicates the nature of the fault. The internal buzzer is activated.

STEP	Actions to be taken
1	Notify service/technical personnel if necessary
2	To silence the internal buzzer, press the black Mute Panel button
3	Scroll with the arrow down (/up) button to observe the point(s) in fault state
4	To view detailed information for a selected point, press Enter
5	Investigate the scene(s) and carry out the necessary actions
6	To acknowledge the fault(s), move back one level using the Cancel/Back button
7	Scroll to select the desired point, press the Function button then select Acknowledge to acknowledge the selected fault or Acknowledge all to acknowledge all faults